



USER MODEL UISA

 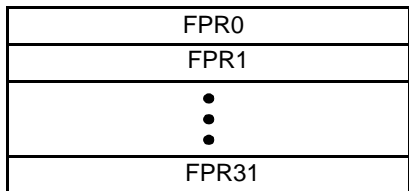


0 63

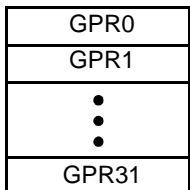


0 31

Condition
Register




0 31

 Floating-Point Status
and Control Register



03 1


User-Level SPRs

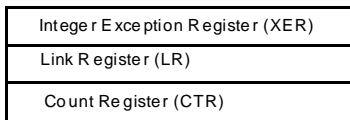

0 31


USER MODEL VEA

 Time Base Facility (for Reading)



SUPERVISOR MODEL OEA

 Machine State Register



03 1

Supervisor-Level SPRs

See table for list of supervisor-level SPRs.

Development Support SPRs

See table for list of development-support SPRs.